

4001	16385	Isolating valve FR/RL axis
4002	16386	Isolating valve FL/RR axis
4003	16387	Electric shuttle valve FR/RL axis
4004	16388	Electric shuttle valve FL/RR axis
4010	16400	Inlet valve FL
4011	16401	Outlet valve FL
4014	16404	Inlet valve FR
4015	16405	Outlet valve FR
4018	16408	Inlet valve RL
4019	16409	Outlet valve RL
401C	16412	Inlet valve RR
401D	16413	Outlet valve RR
4020	16416	Pump motor control
4021	16417	Brake Booster Performance
4030	16432	Front left tone wheel
4031	16433	Front left wheel speed sensor
4033	16435	Front right tone wheel
4034	16436	Front right wheel speed sensor
4036	16438	Rear left tone wheel
4037	16439	Rear left wheel speed sensor
4039	16441	Rear right tone wheel
403A	16442	Rear right wheel speed sensor
4040	16448	Brake pedal switch \A\
4044	16452	Master cylinder pressure sensor
4051	16465	Steering wheel angle sensor
4061	16481	Transversal acceleration sensor
4062	16482	Longitudinal acceleration sensor
4063	16483	Yaw rate sensor
406B	16491	Stability system active too long
406C	16492	Vacuum sensor
4089	16521	Activation switch
408A	16522	Activation HDC switch
5050	20560	ECU ABS or ESC
5125	20773	WSS front axle
5126	20774	WSS rear axle
5127	20775	WSS general
5151	20817	Invalid ABS or ESC calibration parameter
5152	20818	Invalid gearbox parameter
5154	20820	Invalid wheel circumference parameter
5155	20821	Invalid SWA Parameter Configuration
5156	20822	Invalid ESC orientation parameter
5177	20855	Important function deactivated
5178	20856	Secondary function deactivated
5189	20873	Rear Gear Information
5A60	23136	TPW Under Inflated
5A82	23170	TPW Wheel Front Left
5A83	23171	TPW Wheel Front Right
5A84	23172	TPW Wheel Rear Right
5A85	23173	TPW Wheel Rear Left
5A90	23184	TPW Error
5A91	23185	TPW Invalid Input Data
5A93	23187	TPW Auto Calibration Failed
F003	61443	Supply voltage
7	7	Other