

5A60	23136	TPMS_UNDER_INFLATED
5A72	23154	TPMS_WHEEL_1
5A73	23155	TPMS_WHEEL_2
5A74	23156	TPMS_WHEEL_3
5A75	23157	TPMS_WHEEL_4
5A80	23168	TPMS_Function
5A82	23170	TPMS_VALVE_1
5A83	23171	TPMS_VALVE_2
5A84	23172	TPMS_VALVE_3
5A85	23173	TPMS_VALVE_4
5A86	23174	TPMS_RECEIVER
920F	37391	NETWORK_14V
923A	37434	BATTERY
9266	37478	BATTERY_CURRENT_SENSOR
9501	38145	ROM
9502	38146	REGISTERS
9504	38148	EXTERNAL_ANTENNA
9505	38149	DRIVER_DOOR
9510	38160	PWR_BPT
9511	38161	PWR_FR_WIPER
9512	38162	PWR_RR_WIPER
9513	38163	PWR_FLASHERS
9514	38164	PWR_DOORLOCK
9519	38169	NEUTRAL_CONTACT_SW
9520	38176	STARTER_RL
9528	38184	DI_LEFT_LED
9529	38185	DI_RIGHT_LED
9530	38192	DI_LEFT
9531	38193	DI_RIGHT
9532	38194	TGATE_OPENER
9540	38208	PWM_ROOMLAMP_1
9550	38224	WL_CENTAL_CLOSE
9560	38240	CLUTCHSTART_SW
9561	38241	CLUTCH_END_SW
9562	38242	AUTO_CLUTCHSTART_SW
9563	38243	STOP_PEDAL_DFT_11
9564	38244	STOP_PEDAL_DFT_12
9565	38245	STOP_PEDAL_SW2
9566	38246	STOP_PEDAL_SW1
9567	38247	TRACKER_DEVICE
9568	38248	DONGLE_DEVICE
9570	38256	BCM_APV_CODE
9571	38257	INFO_STOP
9572	38258	INFO_STOP_AEBS
9582	38274	EEPROM
95A0	38304	REAR_WIPER
95B2	38322	REAR_GEAR_SW
95F0	38384	TRANSPONDER
95F1	38385	LIN_DEVICE