

C0000 Vehicle Speed Information Circuit Malfunction
C0035 Left Front Wheel Speed Circuit Malfunction
C0040 Right Front Wheel Speed Circuit Malfunction
C0041 Right Front Wheel Speed Sensor Circuit Range/Performance (EBCM)
C0045 Left Rear Wheel Speed Circuit Malfunction
C0046 Left Rear Wheel Speed Sensor Circuit Range/Performance (EBCM)
C0050 Right Rear Wheel Speed Circuit Malfunction
C0051 LF Wheel Speed Sensor Circuit Range/Performance (EBCM)
C0060 Left Front ABS Solenoid #1 Circuit Malfunction
C0065 Left Front ABS Solenoid #2 Circuit Malfunction
C0070 Right Front ABS Solenoid #1 Circuit Malfunction
C0075 Right Front ABS Solenoid #2 Circuit Malfunction
C0080 Left Rear ABS Solenoid #1 Circuit Malfunction
C0085 Left Rear ABS Solenoid #2 Circuit Malfunction
C0090 Right Rear ABS Solenoid #1 Circuit Malfunction
C0095 Right Rear ABS Solenoid #2 Circuit Malfunction
C0110 Pump Motor Circuit Malfunction
C0121 Valve Relay Circuit Malfunction
C0128 Low Brake Fluid Circuit Low
C0141 Left TCS Solenoid #1 Circuit Malfunction
C0146 Left TCS Solenoid #2 Circuit Malfunction
C0151 Right TCS Solenoid #1 Circuit Malfunction
C0156 Right TCS Solenoid #2 Circuit Malfunction
C0161 ABS/TCS Brake Switch Circuit Malfunction
C0221 Right Front Wheel Speed Sensor Circuit Open
C0222 Right Front Wheel Speed Signal Missing
C0223 Right Front Wheel Speed Signal Erratic
C0225 Left Front Wheel Speed Sensor Circuit Open
C0226 Left Front Wheel Speed Signal Missing
C0227 Left Front Wheel Speed Signal Erratic
C0229 Drop Out of Front Wheel Speed Signals
C0235 Rear Wheel Speed Signal Circuit Open
C0236 Rear Wheel Speed Signal Circuit Missing
C0237 Rear Wheel Speed Signal Erratic
C0238 Wheel Speed Mismatch
C0241 EBCM Control Valve Circuit
C0245 Wheel Speed Sensor Frequency Error
C0254 EBCM Control Valve Circuit
C0265 EBCM Relay Circuit
C0266 EBCM Relay Circuit
C0267 Pump Motor Circuit Open/Shorted
C0268 Pump Motor Circuit Open/Shorted
C0269 Excessive Dump/Isolation Time
C0271 EBCM Malfunction
C0272 EBCM Malfunction
C0273 EBCM Malfunction
C0274 Excessive Dump/Isolation Time
C0279 Powertrain Configuration Not Valid
C0281 Brake Switch Circuit
C0283 Traction Switch Shorted to Ground
C0284 EBCM Malfunction
C0286 ABS Indicator Lamp Circuit Shorted to B+
C0287 Delivered Torque Circuit

C0288 Brake Warning Lamp Circuit Shorted to B+
C0290 Lost Communications With PCM
C0292 Lost Communications With PCM
C0291 Lost Communications With BCM
C0297 Powertrain Configuration Data Not Received
C0298 Powertrain Indicated Traction Control Malfunction
C0300 Rear Speed Sensor Malfunction
C0305 Front Speed Sensor Malfunction
C0306 Motor A or B Circuit
C0308 Motor A/B Circuit Low
C0309 Motor A/B Circuit High
C0310 Motor A/B Circuit Open
C0315 Motor Ground Circuit Open
C0321 Transfer Case Lock Circuit
C0323 T-Case Lock Circuit Low
C0324 T-Case Lock Circuit High
C0327 Encoder Circuit Malfunction
C0357 Park Switch Circuit High
C0359 Four Wheel Drive Low Range (4LO) Discrete Output Circuit
C0362 4LO Discrete Output Circuit High
C0367 Front Axle Control Circuit High
C0374 General System Malfunction
C0376 Front/Rear Shaft Speed Mismatch
C0379 Front Axle System
C0387 Unable to Perform Shift
C0472 Steering Handwheel Speed Sensor Signal V Low
C0473 Steering Handwheel Speed Sensor Signal V High
C0495 EVO Tracking Error
C0498 Steering Assist Control Actuator Feed Circuit Low
C0499 Steering Assist Control Solenoid Feed Circuit High
C0503 Steering Assist Control Solenoid Return Circuit Low
C0504 Steering Assist Control Solenoid Return Circuit High
C0550 ECU Malfunction - internal write / checksum malfunction
C0559 EEPROM Checksum Error
C0563 Calibration ROM Checksum Error
C0577 Left Front Solenoid Circuit Low
C0578 Left Front Solenoid Circuit High
C0579 Left Front Solenoid Circuit Open
C0582 Right Front Solenoid Circuit Low
C0583 Right Front Solenoid Circuit High
C0584 Right Front Solenoid Circuit Open
C0587 Left Rear Solenoid Circuit Low
C0588 Left Rear Solenoid Circuit High
C0589 Left Rear Solenoid Circuit Open
C0592 Right Rear Solenoid Circuit Low
C0593 Right Rear Solenoid Circuit High
C0594 Right Rear Solenoid Circuit Open
C0611 VIN Information Error
C0615 Left Front Position Sensor Malfunction
C0620 Right Front Position Sensor Malfunction
C0625 Left Rear Position Sensor Malfunction
C0628 Level Control Position Sensor Circuit High
C0630 Right Rear Position Sensor Malfunction

C0635 Left Front Normal Force Circuit Malfunction
C0638 Left Front Normal Force Circuit High
C0640 Right Front Normal Force Circuit Malfunction
C0643 Right Front Normal Force Circuit High
C0655 Level Control Compressor Relay Malfunction
C0657 Level Control Compressor Circuit Low
C0658 Level Control Compressor Circuit High
C0660 Level Control Exhaust Valve Circuit Malfunction
C0662 Level Control Exhaust Valve Circuit Low
C0663 Level Control Exhaust Valve Circuit High
C0665 Chassis Pitch Signal Circuit
C0690 Damper Control Relay Circuit Malfunction
C0691 Damper Control Relay Circuit Range
C0693 Damper Control Relay Circuit High
C0695 Position Sensor Overcurrent (8 volt supply)
C0696 Position Sensor Overcurrent (5 volt supply)
C0710 Steering Position Signal Malfunction
C0750 Tire Pressure Monitor (TPM) system sensor not transmitting
C0755 Tire Pressure Monitor (TPM) system sensor not transmitting
C0760 Tire Pressure Monitor (TPM) system sensor not transmitting
C0765 Tire Pressure Monitor (TPM) system sensor not transmitting
C0800 Device Power #1 Circuit Malfunction
C0896 Electronic Suspension Control (ESC) voltage is outside the normal range of 9 to 15.5 volts