

B0001 PCM Discrete Input Speed Signal Error
B0004 PCM Discrete Input Speed Signal Not Present
B0005 In Park Switch Circuit Malfunction
B0016 RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Resistance Low
B0017 RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Open
B0018 RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Short to Ground/Voltage Out of Range
B0022 LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Resistance Low
B0024 LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Short to Ground/Voltage Out of Range
B0026 LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Open
B0028 RF/Passenger Side Deployment Loop Resistance Low
B0029 RF/Passenger Side Deployment Loop Open
B0030 RF/Passenger Side Deployment Loop Short to Ground/Voltage Out of Range
B0035 ADS Closed/Shorted to Ground
B0036 ADS Open/Missing/Shorted to Battery
B0037 AUX switch closed/shorted to ground
B0038 AUX switch open/shorted to battery
B0040 LF/Driver Side Deployment Loop Resistance Low
B0041 LF/Driver Side Deployment Loop Open
B0045 LF Side Deploy Loop Short to Ground/Voltage Out of Range
B0051 Deployment Commanded
B0053 Deployment Commanded with Loop Malfunctions Present
B0057 RF/Passenger Pretensioner Deployment Loop Resistance Low
B0058 RF/Passenger Pretensioner Deployment Loop Open
B0059 RF/Passenger Pretensioner Deployment Loop Short to Ground/Voltage Out of Range
B0064 LF/Driver Pretensioner Deployment Loop Resistance Low
B0065 LF/Driver Pretensioner Deployment Loop Open
B0066 LF/Driver Pretensioner Deployment Loop Short to Ground/Voltage Out of Range
B0073 Supplemental Deployment Loop #1 Resistance Low
B0074 Supplemental Deployment Loop #1 Open
B0075 Supplemental Deployment Loop #1 Short to Ground/Voltage Out of Range
B0077 LF/Driver SIS Malfunction
B0078 RF/Passenger SIS Malfunction
B0079 Incorrect LF/Driver SIS Installed
B0080 Discard LF/Driver SIS
B0081 Incorrect RF/Passenger SIS Installed
B0082 Discard RF/Passenger SIS
B0086 Supplemental Deployment Loop #2 Resistance Low
B0087 Supplemental Deployment Loop #2 Open
B0088 Supplemental Deployment Loop #2 Short to Ground/Voltage Out of Range
B0090 Active switch voltage out of range
B0091 Active switch: wrong state
B0092 PPS passenger detection error
B0093 PPS/CPS self-test malfunction
B0094 CPS childseat detection error
B0095 SDM-PPS/CPS mismatch malfunction
B0126 Right Panel Discharge Temperature Fault
B0131 Right Heater Discharge Temperature Fault
B0159 Outside Air Temperature Sensor Circuit Range/Performance
B0164 Passenger Compartment Temperature Sensor #1 (Single Sensor or LH) Circuit Range/Performance
B0169 In-car Temp Sensor Failure (passenger -not used)
B0174 Output Air Temperature Sensor #1 (Upper; Single or LH) Circuit Range/Performance

B0179 Output Air Temperature Sensor #2 (Lower; Single or LH) Circuit Range/Performance
B0184 Solar Load Sensor #1 CKT Range
B0189 Solar Load Sensor #2 CKT Range
B0248 Mode Door Inoperative Error
B0249 Heater/Defrost/AC Door Range Error
B0268 A/I Door Inoperative Error
B0269 Air Inlet Door Range Error
B0408 Temperature Control #1 (Main/Front) Circuit Malfunction
B0409 Air Mix Door #1 Range Error
B0419 Air Mix Door #2 Range Error
B0423 Air Mix Door #2 Inoperative Error
B0428 Air Mix Door #3 Inoperative Error
B0429 Temperature Control #3 Rear Circuit Range/Performance
B0510 RH Panel Discharge Temp Sensor Failure
B0515 RH Heater Discharge Temp Sensor Failure
B0520 Rear Discharge Temp Sensor Failure
B0530 Fuel Level Sensor Stuck
B0532 Fuel Sensor Shorted To Ground
B0533 Fuel Sensor Open/Shorted To B+
B0688 Security System Indicator Circuit High
B0768 Service Indicator Circuit High
B0846 +5 Volt Reference Out of Range
B0856 Battery 2 Out of Range