

<b>Код</b>	<b>Расшифровка</b>
P0102	Low HFM Sensor Signal (Circuit Open)
P0100	Air Mass Flow (HFM) Malfunction
P0103	High HFM Sensor Signal (Circuit Short)
P0105	Supply Voltage Fault to Booster Pressure Sensor
P0106	High Booster Pressure Sensor Signal
P0107	Booster Pressure Sensor Open/GND Short
P0108	Booster Pressure Sensor Short
P0109	Low Booster Pressure Sensor Signal
P0110	Intake Air Temperature Circuit Malfunction - Source Power Problem
P0112	Intake Air Temperature Circuit Malfunction - Open
P0113	Intake Air Temperature Circuit Malfunction - Short
P0115	Supply Voltage Fault to Coolant Temperature Sensor
P0117	Coolant Temperature Sensor Malfunction - Open
P0118	Coolant Temperature Sensor Malfunction - Short
P0120	Accelerator Pedal Sensor #1 Malfunction - Supply Voltage Fault
P0122	Accelerator Pedal Sensor #1 Malfunction - Open
P0123	Accelerator Pedal Sensor #1 Malfunction - Short
P0180	Fuel temperature sensor - Malfunction
P0182	Fuel temperature sensor - Short to Ground
P0183	Fuel temperature sensor - Short to B+
P0190	Supply Voltage Fault to Fuel Rail Pressure Sensor
P0191	Fuel Rail Pressure Sensor Signal Fault
P0192	Fuel Rail Pressure Sensor Malfunction - Open
P0193	Fuel Rail Pressure Sensor Malfunction - Short
P0201	Injector #1 Circuit Open
P0202	Injector #2 Circuit Open
P0203	Injector #3 Circuit Open
P0204	Injector #4 Circuit Open
P0205	Injector #5 Circuit Open
P0215	Main Relay Fault - Stuck
P0219	Too Small Clearance of Crank Angle Sensor
P0220	Accelerator Pedal Sensor #2 Malfunction - Supply Voltage Fault
P0222	Accelerator Pedal Sensor #2 Malfunction - Open
P0223	Accelerator Pedal Sensor #2 Malfunction - Short
P0245	Turbo Charger Actuator Circuit Fault - Short
P0246	Turbo Charger Actuator Circuit Fault - Short to B+
P0251	IMV Driver Circuit Malfunction - Short
P0253	IMV Driver Circuit Malfunction - Short to Ground
P0255	IMV Driver Circuit Malfunction - Open
P0263	Injector #1 Balancing Fault
P0266	Injector #2 Balancing Fault
P0269	Injector #3 Balancing Fault
P0272	Injector #4 Balancing Fault
P0275	Injector #5 Balancing Fault
P0325	Accelerometer #1 (Knock Sensor) Malfunction
P0330	Accelerometer #2 (Knock Sensor) Malfunction
P0335	No Crank Signals
P0336	Too Large Clearance of Crank Angle Sensor
P0341	Cam Position Sensor Malfunction (Poor Synchronization)
P0344	Cam Position Sensor Malfunction
P0372	Crank Angle Sensor Malfunction
P0400	EGR Control Valve Fault
P0560	Battery Voltage Malfunction
P0562	Low Battery Voltage
P0563	High Battery Voltage
P0571	Brake Pedal Switch Fault

P0606 ECU Watchdog Fault  
P0633 Immobilizer Fault (refer to immobilizer section)  
P0641 ECU Supply Voltage 1 Fault (5 V)  
P0642 ECU Supply Voltage 1 Fault - Low (5 V)  
P0643 ECU Supply Voltage 1 Fault - High (5 V)  
P0651 ECU Supply Voltage 2 Fault (5 V)  
P0652 ECU Supply Voltage 2 Fault - Low (5 V)  
P0653 ECU Supply Voltage 2 Fault - High (5 V)  
P0671 #1 Glow Plug Fault - Open  
P0672 #2 Glow Plug Fault - Open  
P0673 #3 Glow Plug Fault - Open  
P0674 #4 Glow Plug Fault - Open  
P0675 #5 Glow Plug Fault - Open  
P0685 Main Relay Malfunction  
P0697 ECU Supply Voltage Fault (2.5 V)  
P0698 ECU Supply Voltage Fault - Low (2.5 V)  
P0699 ECU Supply Voltage Fault - High (2.5 V)  
P0700 TCU Signal Fault  
P0704 Clutch switch malfunction  
P1105 Barometric Sensor Circuit Short  
P1106 Booster Pressure Sensor Malfunction  
P1107 Barometric Sensor Circuit Short/GND Short  
P1108 Barometric Sensor Circuit Short  
P1109 Booster Pressure Sensor Initial Check Fault  
P1115 Coolant Temperature Sensor Malfunction  
P1120 Accelerator Pedal Sensor #1 Malfunction  
P1121 Accelerator Pedal Sensor #2 Malfunction  
P1122 Accelerator Pedal Sensor Malfunction (Limp Home Mode)  
P1123 Accelerator Pedal Sensor Malfunction (Torque Mode)  
P1124 Accelerator Pedal Sensor Malfunction - Stuck  
P1148 Accelerometer (Knock Sensor) Learning Fault  
P1149 Too High Water Level in Fuel Filter  
P1170 Torque Trim Fault - High  
P1171 #1 Injector MDP Malfunction  
P1172 #2 Injector MDP Malfunction  
P1173 #3 Injector MDP Malfunction  
P1174 #4 Injector MDP Malfunction  
P1175 #5 Injector MDP Malfunction  
P1190 Fuel Rail Pressure Sensor Initial Signal Fault  
P1191 Pressure Build Up - Too Slow  
P1192 Fuel Rail Pressure Sensor Initial Signal Fault - Low  
P1193 Fuel Rail Pressure Sensor Initial Signal Fault - High  
P1201 Injector #1 Circuit Short  
P1202 Injector #2 Circuit Short  
P1203 Injector #3 Circuit Short  
P1204 Injector #4 Circuit Short  
P1205 Injector #5 Circuit Short  
P1235 VGT Operation Fault  
P1252 Too High IMV Pressure  
P1253 Minimum Rail Pressure Control Malfunction (IMV Fault)  
P1254 Maximum Rail Pressure Control Malfunction (IMV Fault)  
P1256 Too Small Transfer Pressure Fuel in Rail Pressure System  
P1257 Too Large Transfer Pressure Fuel in Rail Pressure System  
P1258 Too Small High Pressure Fuel in Rail Pressure System  
P1259 Too Large High Pressure Fuel in Rail Pressure System  
P1286 Low Resistance for Injector #1 wiring harness  
P1287 High Resistance for Injector #1 wiring harness

P1288 Low Resistance for Injector #2 wiring harness  
P1289 High Resistance for Injector #2 wiring harness  
P1290 Low Resistance for Injector #3 wiring harness  
P1291 High Resistance for Injector #3 wiring harness  
P1292 Low Resistance for Injector #4 wiring harness  
P1293 High Resistance for Injector #4 wiring harness  
P1294 Low Resistance for Injector #5 wiring harness  
P1295 High Resistance for Injector #5 wiring harness  
P1405 EGR Solenoid Valve Short Malfunction - Short  
P1406 EGR Solenoid Valve Malfunction - Short  
P1480 Condenser Fan #1 Circuit Malfunction - Open  
P1481 Condenser Fan #1 Circuit Malfunction - Short  
P1482 Condenser Fan #1 Circuit Malfunction - Short to Ground  
P1500 Vehicle Speed Fault  
P1526 Condenser Fan #2 Circuit Malfunction - Open  
P1527 Condenser Fan #2 Circuit Malfunction - Short  
P1528 Condenser Fan #2 Circuit Malfunction - Short to Ground  
P1530 #1 Heater operating circuit - Open  
P1531 #1 Heater operating circuit - Short  
P1532 #1 Heater operating circuit - Short to Ground  
P1534 #2 Heater operating circuit - Open  
P1535 #2 Heater operating circuit - Short  
P1536 #2 Heater operating circuit - Short to Ground DI10-48  
P1540 Air Conditioner Operating Circuit Fault - Open  
P1541 Air Conditioner Operating Circuit Fault - Short  
P1542 Air Conditioner Operating Circuit Fault - Short to Ground  
P1571 Brake Lamp Signal Fault  
P1572 Brake Lamp Signal Fault  
P1600 ECU Shut Down Fault  
P1601 ECU Fault  
P1602 ECU Fault  
P1603 ECU Fault  
P1604 ECU Fault  
P1605 ECU Fault  
P1606 ECU Fault  
P1607 ECU Injector Cut Fault  
P1608 ECU Fault  
P1611 Injector Bank #1 Malfunction - Low Voltage  
P1612 Injector Bank #1 Malfunction - High Voltage  
P1614 ECU C2I/MDP Fault  
P1615 ECU Fault  
P1616 ECU Fault  
P1618 Injector Bank #2 Malfunction - Low Voltage  
P1619 Injector Bank #2 Malfunction - High Voltage  
P1620 ECU Fault  
P1621 ECU Fault  
P1622 ECU Fault  
P1630 Wrong response from Immobilizer (refer to immobilizer section)  
P1631 Immobilizer Fault (refer to immobilizer section)  
P1632 Immobilizer Fault (refer to immobilizer section)  
P1633 Immobilizer Fault (refer to immobilizer section)  
P1634 Immobilizer Fault (refer to immobilizer section)  
P1635 No response from Immobilizer (refer to immobilizer section)  
P1636 Immobilizer Fault (refer to immobilizer section)  
P1671 #1 Glow Plug Fault - Short (+B)  
P1672 #2 Glow Plug Fault - Short (B+)  
P1673 #3 Glow Plug Fault - Short (B+)

P1674 #4 Glow Plug Fault - Short (B+)  
P1675 #5 Glow Plug Fault - Short (B+)  
P1676 Glow Plug Communication Fault  
P1677 Glow Plug Controller Fault  
P1678 Glow Plug Malfunction - Open  
P1679 Glow Plug Malfunction - Short  
P1680 Glow Plug Malfunction - Short to Ground