

В своей практической деятельности диагносты часто сталкиваются с проблемой правильной интерпретации информации, получаемой ими из диагностических приборов. Проблема эта вызвана тем обстоятельством, что информационные сообщения содержат акронимы и аббревиатуры различных специальных терминов согласно SAE J1930, которые приняты в международном стандарте ISO.

RECOMMENDED TERM ACRONYM

3-2 Timing Solenoid 3-2TS
Accelerator Pedal AP (1)
Accelerator Pedal Position APP
Air Cleaner ACL
Air Conditioning A/C
Air Fuel Ratio A/F
Ambient Air Temperature AAT
Automatic Transaxle A/T
Automatic Transmission A/T
Barometric Pressure BARO (1)
Battery Positive Voltage B+ (1)
Blower Control BC
Brake Pedal Position BPP
Brake Pressure (2)
Bus Negative BUS N
Bus Positive BUS P
Calculated Load Value LOAD
Camshaft Position CMP
Canister (2)
Carbon Dioxide CO₂
Carbon Monoxide CO
Carburetor CARB (1)
Catalytic Converter Heater (2)
Charge Air Cooler CAC (1)
Climate Control CC
Closed Loop CL
Closed Throttle Position CTP
Clutch Pedal Position CPP
Coast Clutch Solenoid CCS
Constant Volume Sampler CVS
Continuous Fuel Injection CFI
Continuous Trap Oxidizer CTOX
Crankshaft Position CKP
Critical Flow Venturi CFV
Data Link Connector DLC (1)
Diagnostic Test Mode DTM
Diagnostic Trouble Code DTC
Direct Fuel Injection DFI
Distributor Ignition DI
Drive Motor DM
Drive Motor Control Module DMCM
Drive Motor Coolant Temperature DMCT
Drive Motor Power Inverter DMPI
Driver (2)
Early Fuel Evaporation EFE
Electrically Erasable Programmable Read Only Memory EEPROM
Electronic Ignition EI
Engine Control EC
Engine Control Module ECM (1)
Engine Coolant Level ECL
Engine Coolant Temperature ECT

Engine Fuel Temperature EFT
Engine Modification EM
Engine Oil Pressure EOP
Engine Oil Temperature EOT
Engine Speed RPM (1)
Erasable Programmable Read Only Memory EPROM
Evaporative Emission EVAP (1)
Exhaust Gas Recirculation EGR
Exhaust Gas Recirculation Temperature EGRT
Exhaust Pressure EP
Four Wheel Drive 4WD
Fan Control FC
Flame Ionization Detector FID

RECOMMENDED TERM ACRONYM

Flash Electrically Erasable Programmable Read Only Memory FEEPROM
Flash Erasable Programmable Read Only Memory FEPRM
Flexible Fuel FF
Fourth Gear 4GR (1)
Freeze Frame (2), (3)
Front Wheel Drive FWD
Fuel Level Sensor (2)
Fuel Pressure (2)
Fuel Pump FP (1)
Fuel Rail Pressure FRP
Fuel Rail Temperature FRT
Fuel System Status (2), (3)
Fuel Tank Pressure FTP
Fuel Tank Temperature FTT
Fuel Trim FT
Full Time Four Wheel Drive F4WD
Generator GEN (1)
Glow Plug (2)
Governor (2)
Governor Control Module GCM (1)
Grams Per Mile GPM
Ground GND
Heated Oxygen Sensor HO2S (1)
High Clutch Drum Speed HCDS
High Pressure Cutoff HPC
Hydrocarbon HC
Idle Air Control IAC
Idle Speed Control ISC
Ignition Control IC
Ignition Control Module ICM (1)
Indirect Fuel Injection IFI
Inertia Fuel Shutoff IFS
Injection Control Pressure ICP
Input Shaft Speed ISS
Intake Manifold Tuning IMT
Inspection and Maintenance I/M (1)
Intake Air IA
Intake Air Temperature IAT
Intake Manifold Runner Control IMRC
Knock Sensor KS (1)
Malfunction Indicator Lamp MIL (1)
Manifold Absolute Pressure MAP
Manifold Differential Pressure MDP

Manifold Surface Temperature MST
Manifold Vacuum Zone MVZ
Mass Airflow MAF
Mixture Control MC
Multiport Fuel Injection MFI
Non Dispersive Infra Red NDIR
Non-Volatile Random Access Memory NVRAM
Nitrogen Oxides NOX
On Board Diagnostic OBD
Open Loop OL
Overdrive Drum Speed ODS
Output Shaft Speed OSS
Oxidation Catalytic Converter OC
Oxygen O2
Oxygen Sensor O2S (1)
Park / Neutral Position PNP
Parameter Identification PID
Periodic Trap Oxidizer PTOX
Positive Crankcase Ventilation PCV
Power Steering Pressure PSP
Power Steering Control PSC
Powertrain Control Module PCM (1)
Pressure Control PC
Pressure Relief PR
Programmable Read Only Memory PROM
Pulsed Secondary Air Injection PAIR (1)
Pulse Width Modulation PWM
Random Access Memory RAM
Read Only Memory ROM
Rear Wheel Drive RWD
Relay Module RM (1)
Scan Tool ST (1)
Secondary Air Injection AIR (1)
Selectable Four Wheel Drive S4WD
Sequential Multiport Fuel Injection SFI
Service Reminder Indicator SRI (1)
Shift Solenoid SS
Smoke Puff Limiter SPL
Spark Advance (2), (3)
Spark Plug (2)
Supercharger SC (1)
Supercharger Bypass SCB
System Readiness Test SRT
Thermal Expansion TE
Thermal Vacuum Valve TVV (1)
Third Gear 3GR (1)
Three Way + Oxidation Catalytic Converter TWC+OC
Three Way Catalytic Converter TWC
Throttle Actuator (2)
Throttle Actuator Control TAC
Throttle Body TB (1)
Throttle Body Fuel Injection TBI
Throttle Position TP
Torque Converter Clutch TCC (1)
Torque Converter Clutch Pressure TCCP
Track Road Load Horsepower TRLHP
Transmission Control Module TCM (1)
Transmission Fluid Pressure TFP

Transmission Fluid Temperature TFT
Transmission Range TR
Turbine Shaft Speed TSS
Turbocharger TC (1)
Variable Control Relay Module VCRM
Vehicle Control Module VCM (1)
Vehicle Identification Number VIN
Vehicle Speed Sensor VSS (1)
Voltage Regulator VR (1)
Volume Airflow VAF
Warm Up Oxidation Catalytic Converter WU-OC
Warm Up Three Way Catalytic Converter WU-TWC
Wide Open Throttle WOT

1. Historically acceptable common usage
2. Use recommended term only
3. For alphanumeric descriptor, Bold indicates new/revised entry

ACRONYM RECOMMENDED TERM

3-2TS 3-2 Timing Solenoid
AP (1) Accelerator Pedal
APP Accelerator Pedal Position
ACL Air Cleaner
A/C Air Conditioning
A/F Air Fuel Ratio
AAT Ambient Air Temperature
A/T Automatic Transaxle
A/T Automatic Transmission
BARO (1) Barometric Pressure
B+ (1) Battery Positive Voltage
BC Blower Control
BPP Brake Pedal Position
(2) Brake Pressure
BUS N Bus Negative
BUS P Bus Positive
LOAD Calculated Load Value
CMP Camshaft Position
(2) Canister
CO₂ Carbon Dioxide
CO Carbon Monoxide
CARB (1) Carburetor
(2) Catalytic Converter Heater
CAC (1) Charge Air Cooler
CC Climate Control
CL Closed Loop
CTP Closed Throttle Position
CPP Clutch Pedal Position
CCS Coast Clutch Solenoid
CVS Constant Volume Sampler
CFI Continuous Fuel Injection
CTOX Continuous Trap Oxidizer
CKP Crankshaft Position
CFV Critical Flow Venturi
DLC (1) Data Link Connector
DTM Diagnostic Test Mode
DTC Diagnostic Trouble Code
DFI Direct Fuel Injection
DI Distributor Ignition

DM Drive Motor
DMCM Drive Motor Control Module
DMCT Drive Motor Coolant Temperature
DMPI Drive Motor Power Inverter
(2) Driver
EFE Early Fuel Evaporation
EEPROM Electrically Erasable Programmable Read Only Memory
EI Electronic Ignition
EC Engine Control
ECM (1) Engine Control Module
ECL Engine Coolant Level
ECT Engine Coolant Temperature
EFT Engine Fuel Temperature
EM Engine Modification
EOP Engine Oil Pressure
EOT Engine Oil Temperature
RPM (1) Engine Speed
EPROM Erasable Programmable Read Only Memory
EVAP (1) Evaporative Emission
EGR Exhaust Gas Recirculation
EGRT Exhaust Gas Recirculation Temperature
EP Exhaust Pressure
4WD Four Wheel Drive
Fan Control FC
FID Flame Ionization Detector
FEEPROM Flash Electrically Erasable Programmable Read Only Memory
FEPRM Flash Erasable Programmable Read Only Memory
FF Flexible Fuel
4GR (1) Fourth Gear
(2), (3) Freeze Frame
FWD Front Wheel Drive
(2) Fuel Level Sensor
(2) Fuel Pressure
FP (1) Fuel Pump
FRP Fuel Rail Pressure
FRT Fuel Rail Temperature
(2), (3) Fuel System Status
FTP Fuel Tank Pressure
FTT Fuel Tank Temperature
FT Fuel Trim
F4WD Full Time Four Wheel Drive
GEN (1) Generator
(2) Glow Plug
(2) Governor
GCM (1) Governor Control Module
GPM Grams Per Mile
GND Ground
HO2S (1) Heated Oxygen Sensor
HCDS High Clutch Drum Speed
HPC High Pressure Cutoff
HC Hydrocarbon
IAC Idle Air Control
ISC Idle Speed Control
IC Ignition Control
ICM (1) Ignition Control Module
IFI Indirect Fuel Injection
IFS Inertia Fuel Shutoff
ICP Injection Control Pressure

ISS Input Shaft Speed
IMT Intake Manifold Tuning
I/M (1) Inspection and Maintenance
IA Intake Air
IAT Intake Air Temperature
IMRC Intake Manifold Runner Control
KS (1) Knock Sensor
MIL (1) Malfunction Indicator Lamp
MAP Manifold Absolute Pressure
MDP Manifold Differential Pressure
MST Manifold Surface Temperature
MVZ Manifold Vacuum Zone
MAF Mass Airflow
MC Mixture Control
MFI Multiport Fuel Injection
NDIR Non Dispersive Infra Red
NVRAM Non-Volatile Random Access Memory
NOX Nitrogen Oxides
OBD On Board Diagnostic
OL Open Loop
ODS Overdrive Drum Speed
OSS Output Shaft Speed
OC Oxidation Catalytic Converter
O2 Oxygen
O2S (1) Oxygen Sensor
PNP Park / Neutral Position
PID Parameter Identification
PTOX Periodic Trap Oxidizer
PCV Positive Crankcase Ventilation
PSP Power Steering Pressure
PSC Power Steering Control
PCM (1) Powertrain Control Module
PC Pressure Control
PR Pressure Relief
PROM Programmable Read Only Memory
PAIR (1) Pulsed Secondary Air Injection
PWM Pulse Width Modulation
RAM Random Access Memory
ROM Read Only Memory
RWD Rear Wheel Drive
RM (1) Relay Module
ST (1) Scan Tool
AIR (1) Secondary Air Injection
S4WD Selectable Four Wheel Drive
SFI Sequential Multiport Fuel Injection
SRI (1) Service Reminder Indicator
SS Shift Solenoid
SPL Smoke Puff Limiter
(2), (3) Spark Advance
(2) Spark Plug
SC (1) Supercharger
SCB Supercharger Bypass
SRT System Readiness Test
TE Thermal Expansion
TVV (1) Thermal Vacuum Valve
3GR (1) Third Gear
TWC+OC Three Way + Oxidation Catalytic Converter
TWC Three Way Catalytic Converter

(2) Throttle Actuator
TAC Throttle Actuator Control
TB (1) Throttle Body
TBI Throttle Body Fuel Injection
TP Throttle Position
TCC (1) Torque Converter Clutch
TCCP Torque Converter Clutch Pressure
TRLHP Track Road Load Horsepower
TCM (1) Transmission Control Module
TFP Transmission Fluid Pressure
TFT Transmission Fluid Temperature
TR Transmission Range
TSS Turbine Shaft Speed
TC (1) Turbocharger
VCRM Variable Control Relay Module
VCM (1) Vehicle Control Module
VIN Vehicle Identification Number
VSS (1) Vehicle Speed Sensor
VR (1) Voltage Regulator
VAF Volume Airflow
WU-OC Warm Up Oxidation Catalytic Converter
WU-TWC Warm Up Three Way Catalytic Converter
WOT Wide Open Throttle

1. Historically acceptable common usage
2. Use recommended term only
3. For alphanumeric descriptor, Bold indicates new/revised entry

CROSS-REFERENCE AND LOOK-UP

EXISTING USAGE / ACCEPTABLE USAGE / ACCEPTABLE ACRONIZED USAGE

3-2 Timing Solenoid / 3-2 Timing Solenoid / 3-2TS
3-2 Timing Solenoid Valve / 3-2 Timing Solenoid Valve / 3-2TS Valve
3-2TS (3-2 Timing Solenoid) Valve / 3-2 Timing Solenoid Valve / 3-2TS Valve
3-2TS (3-2 Timing Solenoid) / 3-2 Timing Solenoid / 3-2TS
3GR (Third Gear) / Third Gear / 3GR

4GR (Fourth Gear) / Fourth Gear / 4GR
4WD (Four Wheel Drive) / Four Wheel Drive / 4WD
4WD (Four Wheel Drive) / Full Time Four Wheel Drive / F4WD
4WD (Four Wheel Drive) / Selectable Four Wheel Drive / S4WD
A/C (Air Conditioning) / Air Conditioning / A/C

A/C Cycling Switch / Air Conditioning Cycling Switch / A/C Cycling Switch
A/F Ratio Sensor / Air Fuel Ratio Sensor / A/F Sensor
A/T (Automatic Transaxle) / Automatic Transaxle / A/T
A/T (Automatic Transmission) / Automatic Transmission / A/T
AAT (Ambient Air Temperature) / Ambient Air Temperature / AAT

AC (Air Conditioning) / Air Conditioning / A/C
ACC (Air Conditioning Clutch) / Air Conditioning Clutch / A/C Clutch
Accelerator / Accelerator Pedal / AP
Accelerator Pedal Position / Accelerator Pedal Position / APP
ACCS (Air Conditioning Cycling Switch) / Air Conditioning Cycling Switch / A/C Cycling Switch

ACH (Air Cleaner Housing) / Air Cleaner Housing / ACL Housing
ACL (Air Cleaner) / Air Cleaner / ACL
ACL (Air Cleaner) Element / Air Cleaner Element / ACL Element
ACL (Air Cleaner) Housing / Air Cleaner Housing / ACL Housing
ACL (Air Cleaner) Housing Cover / Air Cleaner Housing Cover / ACL Housing Cover

ACS (Air Conditioning System) / Air Conditioning System / A/C System
ACT (Air Charge Temperature) / Intake Air Temperature / IAT
Adaptive Fuel Strategy / Fuel Trim / FT
AFC (Airflow Control) / Mass Airflow / MAF
AFC (Airflow Control) / Volume Airflow / VAF

AFS (Airflow Sensor) / Mass Airflow Sensor / MAF Sensor
AFS (Airflow Sensor) / Volume Airflow Sensor / VAF Sensor
After Cooler / Charge Air Cooler / CAC
AI (Air Injection) / Secondary Air Injection / AIR
AIP (Air Injection Pump) / Secondary Air Injection Pump / AIR Pump

AIR (Air Injection Reactor) / Pulsed Secondary Air Injection / PAIR
AIR (Air Injection Reactor) / Secondary Air Injection / AIR
Air Cleaner / Air Cleaner / ACL
Air Cleaner Element / Air Cleaner Element / ACL Element
Air Cleaner Housing / Air Cleaner Housing / ACL Housing

Air Cleaner Housing Cover / Air Cleaner Housing Cover / ACL Housing Cover
Air Conditioning / Air Conditioning / A/C
Air Conditioning Sensor / Air Conditioning Sensor / A/C Sensor
Air Control Valve / Secondary Air Injection Control Valve / AIR Control Valve
Air Cleaner Housing / Air Cleaner Housing / ACL Housing

Air Conditioning / Air Conditioning / A/C
Air Conditioning Sensor / Air Conditioning Sensor / A/C Sensor
Air Control Valve / Secondary Air Injection Control Valve / AIR Control Valve
Air Fuel Ratio Sensor / Air Fuel Ratio Sensor / A/F Sensor
Air Intake System / Intake Air System / IA System

AIRB (Secondary Air Injection Bypass) / Secondary Air Injection Bypass / AIR Bypass
AIRD (Secondary Air Injection Diverter) / Secondary Air Injection Diverter / AIR Diverter
Airflow Meter / Mass Airflow Sensor / MAF Sensor
Airflow Meter / Volume Airflow Sensor / VAF Sensor
Airflow Sensor / Mass Airflow Sensor / MAF Sensor

Air Management / Secondary Air Injection Bypass / AIR Bypass
Air Management 2 / Secondary Air Injection Diverter / AIR Diverter
Air Temperature Sensor / Intake Air Temperature Sensor / IAT Sensor
Air Valve / Idle Air Control Valve / IAC Valve
AIV (Air Injection Valve) / Pulsed Secondary Air Injection / PAIR

ALCL (Assembly Line Communication Link) / Data Link Connector / DLC
Alcohol Concentration Sensor / Flexible Fuel Sensor / FF Sensor
ALDL (Assembly Line Diagnostic Link) / Data Link Connector / DLC
ALT (Alternator) / Generator / GEN
Alternator / Generator / GEN

AM (Air Management) / Secondary Air Injection Bypass / AIR Bypass
AM2 (Air Management 2) / Secondary Air Injection Diverter / AIR Diverter
Ambient Air Temperature / Ambient Air Temperature / AAT

APP (Accelerator Pedal Position) / Accelerator Pedal Position / APP
APS (Absolute Pressure Sensor) / Barometric Pressure Sensor / BARO Sensor

ATS (Air Temperature Sensor) / Intake Air Temperature Sensor / IAT Sensor
Automatic Temperature Control / Climate Control / CC
Automatic Transaxle / Automatic Transaxle A/T
Automatic Transmission / Automatic Transmission A/T
B+ (Battery Positive Voltage) / Battery Positive Voltage B+

Backpressure Transducer / Exhaust Gas Recirculation / EGR Backpressure Transducer
Backpressure Transducer
BARO (Barometric Pressure) / Barometric Pressure / BARO
Barometric Pressure Sensor / Barometric Pressure Sensor / BARO Sensor
Battery Positive Voltage / Battery Positive Voltage / B+
BC (Blower Control) / Blower Control / BC

BLM (Block Learn Matrix) / Long Term Fuel Trim / Long Term FT
BLM (Block Learn Memory) / Long Term Fuel Trim / Long Term FT
BLM (Block Learn Multiplier) / Long Term Fuel Trim / Long Term FT
Block Learn Integrator / Long Term Fuel Trim / Long Term FT
Block Learn Matrix / Long Term Fuel Trim / Long Term FT

Block Learn Memory / Long Term Fuel Trim / Long Term FT
Block Learn Multiplier / Long Term Fuel Trim / Long Term FT
Blower Control / Blower Control / BC
Blower Control Module / Blower Control Module / BC Module
Blower Motor Speed Controller / Blower Control Module / BC Module

BP (Barometric Pressure) Sensor / Barometric Pressure Sensor / BARO Sensor
BPP (Brake Pedal Position) / Brake Pedal Position / BPP
Brake Pedal Position / Brake Pedal Position / BPP
Brake Pressure / Brake Pressure / Brake Pressure
BUS Negative / Bus Negative / BUS N

BUS Positive / Bus Positive / BUS P
BUS N / Bus Negative / BUS N
BUS P / Bus Positive / BUS P
Calculated Load Value / Calculated Load Value / Load
C 3 I (Computer Controlled Coil Ignition) / Electronic Ignition / EI

CAC (Charge Air Cooler) / Charge Air Cooler / CAC
Camshaft Position / Camshaft Position / CMP
Camshaft Position Actuator / Camshaft Position Actuator / CMP Actuator
Camshaft Position Controller / Camshaft Position Actuator / CMP Actuator
Camshaft Position Sensor / Camshaft Position Sensor / CMP Sensor

Camshaft Sensor / Camshaft Position Sensor / CMP Sensor
Camshaft Timing Actuator / Camshaft Position Actuator / CMP Actuator
Canister / Canister / Canister
Canister / Evaporative Emission Canister / EVAP Canister
Canister Purge / Evaporative Emission Canister Purge / EVAP Canister Purge

Canister Purge Vacuum Switching Valve / Evaporative Emission Canister Purge Valve / EVAP Canister Purge Valve
Canister Purge Valve / Evaporative Emission Canister Purge Valve / EVAP Canister Purge Valve
Canister Purge VSV / Evaporative Emission Canister Purge Valve / EVAP Canister Purge Valve
(Vacuum Switching Valve)
CANP (Canister Purge) / Evaporative Emission Canister Purge / EVAP Canister Purge
CARB (Carburetor) / Carburetor / CARB

Carbon Dioxide / Carbon Dioxide / CO2
Carbon Monoxide / Carbon Monoxide / CO
Carburetor / Carburetor / CARB
Catalytic Converter Heater / Catalytic Converter Heater / Catalytic Converter Heater
CC (Climate Control) / Climate Control / CC

CCC (Converter Clutch Control) / Torque Converter Clutch / TCC
CCO (Converter Clutch Override) / Torque Converter Clutch / TCC
CCRM (Constant Control Relay Module) / Relay Mode / RM
CCS (Coast Clutch Solenoid) / Coast Clutch Solenoid / CCS
CCS (Coast Clutch Solenoid) Valve / Coast Clutch Solenoid Valve / CCS Valve

CDI (Capacitive Discharge Ignition) / Distributor Ignition / DI
CDROM (Compact Disc Read Only Memory) / Compact Disc Read Only Memory / CDROM
Central Multiport Fuel Injection / Central Multiport Fuel Injection / Central MFI
Central Sequential Multiport Fuel Injection / Central Multiport Fuel Injection / Central SFI
CES (Clutch Engage Switch) / Clutch Pedal Position Switch / CPP Switch

CFI (Central Fuel Injection) / Throttle Body Fuel Injection / TBI
CFI (Continuous Fuel Injection) / Continuous Fuel Injection / CFI
CFV (Critical Flow Venturi) / Critical Flow Venturi / CFV
Charcoal Canister / Evaporative Emission Canister / EVAP Canister
Charge Air Cooler / Charge Air Cooler / CAC

Check Engine / Service Reminder Indicator / SRI
Check Engine / Malfunction Indicator Lamp / MIL
CID (Cylinder Identification) Sensor / Camshaft Position Sensor / CMP Sensor
CIS-E (Continuous Injection System Electronic) / Continuous Fuel Injection / CFI
CIS (Continuous Injection System) / Continuous Fuel Injection / CFI

CKP (Crankshaft Position) / Crankshaft Position / CKP
CKP (Crankshaft Position) Sensor / Crankshaft Position sensor / CKP Sensor
CL (Closed Loop) / Closed Loop / CL
Climate Control / Climate Control / CC
Closed Bowl Distributor / Distributor Ignition / DI

Closed Throttle Position / Closed Throttle Position / CTP
Closed Throttle Switch / Closed Throttle Position Switch / CTP Switch
CLS (Closed Loop System) / Closed Loop / CL
Clutch Engage Switch / Clutch Pedal Position Switch / CPP Switch
Clutch Pedal Position Switch / Clutch Pedal Position Switch / CPP Switch

Clutch Start Switch / Clutch Pedal Position Switch / CPP Switch
Clutch Switch / Clutch Pedal Position Switch / CPP Switch
CLV (Calculated Load Value) / Calculated Load Value / Load
CMFI (Central Multiport Fuel Injection) / Central Multiport Fuel Injection / Central MFI
CMP (Camshaft Position) / Camshaft Position / CMP

CMP (Camshaft Position) Sensor / Camshaft Position Sensor / CMP Sensor
CO (Carbon Monoxide) / Carbon Monoxide / CO
CO (Carbon Monoxide) Potentiometer / Carbon Monoxide Potentionmeter / CO Potentionmeter
CO2 (Carbon Dioxide) / Carbon Dioxide / CO2
Coast Clutch Solenoid / Coast Clutch Solenoid / CCS

COC (Continuous Oxidation Catalyst) / Oxidation Catalytic Converter / OC
Coast Clutch Solenoid Valve / Coast Clutch Solenoid Valve / CCS Valve
Condenser / Distributor Ignition Capacitor / DI Capacitor

Constant Control Relay Module / Relay Module / RM
Constant Volume Sampler / Constant Volume Sampler / CVS

Continuous Fuel Injection / Continuous Fuel Injection / CFI
Continuous Injection System / Continuous Fuel Injection System / CFI System
Continuous Injection System-E / Electronic Continuous Fuel Injection System / Electronic CFI System
Continuous Trap Oxidizer / Continuous Trap Oxidizer / CTOX
Coolant Temperature Sensor / Engine Coolant Temperature Sensor / ECT Sensor

CP (Crankshaft Position) / Crankshaft Position / CKP
CPP (Clutch Pedal Position) / Clutch Pedal Position / CPP
CPP (Clutch Pedal Position) / Switch Clutch Pedal Position Switch / CPP Switch
CPS (Camshaft Position Sensor) / Camshaft Position Sensor / CMP Sensor
CPS (Crankshaft Position Sensor) / Crankshaft Position Sensor / CKP Sensor

Crank Angle Sensor / Crankshaft Position Sensor / CKP Sensor
Crankshaft Position / Crankshaft Position / CKP
Crankshaft Position Sensor / Crankshaft Position Sensor / CKP Sensor
Crankshaft Speed / Engine Speed / RPM
Crankshaft Speed Sensor / Engine Speed Sensor / RPM Sensor

Critical Flow Venturi / Critical Flow Venturi / CFV
CTO (Continuous Trap Oxidizer) / Continuous Trap Oxidizer / CTOX
CTOX (Continuous Trap Oxidizer) / Continuous Trap Oxidizer / CTOX
CTP (Closed Throttle Position) / Closed Throttle Position / CTP
CTS (Coolant Temperature Sensor) / Engine Coolant Temperature Sensor / ECT Sensor

CTS (Coolant Temperature Switch) / Engine Coolant Temperature Switch / ECT Switch
CVS (Constant Volume Sampler) / Constant Volume Sampler / CVS
Cylinder ID (Identification) Sensor / Camshaft Position Sensor / CMP Sensor

D-Jetronic / Multiport Fuel Injection / MFI
Data Link Connector / Data Link Connector / DLC

Detonation Sensor / Knock Sensor / KS
DFI (Digital Fuel Injection) / Multiport Fuel Injection / MFI
DFI (Direct Fuel Injection) / Throttle Body Fuel Injection / TBI
DI (Direct Injection) / Direct Fuel Injection / DFI
DI (Distributor Ignition) / Distributor Ignition / DI

DI (Distributor Ignition) Capacitor / Distributor Ignition Capacitor / DI Capacitor
Diagnostic Test Mode / Diagnostic Test Mode / DTM
Diagnostic Trouble Code / Diagnostic Trouble Code / DTC
DID (Direct Injection—Diesel) / Direct Fuel Injection / DFI
Differential Pressure Feedback EGR / Differential Pressure Feedback Exhaust / Differential Pressure Feedback

(Exhaust Gas Recirculation) System / Gas Recirculation System / EGR System
Digital EGR (Exhaust Gas Recirculation) / Exhaust Gas Recirculation / EGR
Direct Fuel Injection / Direct Fuel Injection / DFI
Direct Ignition System / Electronic Ignition System / EI System
DIS (Distributorless Ignition System) / Electronic Ignition System / EI System

DIS (Distributorless Ignition System) / Ignition Control Module / ICM
Module
Distance Sensor / Vehicle Speed Sensor / VSS
Distributor Ignition / Distributor Ignition / DI
Distributorless Ignition / Electronic Ignition / EI
DLC (Data Link Connector) / Data Link Connector / DLC

DLI (Distributorless Ignition) / Electronic Ignition / EI
DM (Drive Motor) / Drive Motor / DM
DMCM (Drive Motor Control Module) / Drive Motor Control Module / DMCM
DMCT (Drive Motor Coolant Temperature) / Drive Motor Coolant Temperature / DMCT
DMPI (Drive Motor Power Inverter) / Drive Motor Power Inverter Module / DMPI Module
Module

Drive Motor / Drive Motor / DM
Drive Motor Control Module / Drive Motor Control Module / DMCM
Drive Motor Coolant Temperature / Drive Motor Coolant Temperature / DMCT
Drive Motor Power Inverter Module / Drive Motor Power Inverter Module / DMPI Module
Driver / Driver / Driver

DS (Detonation Sensor) / Knock Sensor / KS
DTC (Diagnostic Trouble Code) / Diagnostic Trouble Code / DTC
DTM (Diagnostic Test Mode) / Diagnostic Test Mode / DTM
Dual Bed / Three Way + Oxidation Catalytic / TWC+OC
Converter
Duty Solenoid for Purge Valve / Evaporative Emission Canister Purge / EVAP Canister Purge Valve
Valve

Dynamic Pressure Control / Dynamic Pressure Control / Dynamic PC
Dynamic Pressure Control Solenoid / Dynamic Pressure Control Solenoid / Dynamic PC Solenoid
Dynamic Pressure Control Solenoid Valve / Dynamic Pressure Control Solenoid / Dynamic PC Solenoid Valve
Valve
E2PROM (Electrically Erasable / Electrically Erasable Programmable / EEPROM
Programmable Read Only Memory) / Read Only Memory
Early Fuel Evapoaration / Early Fuel Evaporation / EFE

EATX (Electronic Automatic / Automatic Transmission / A/T
Transmission/Transaxle)
EC (Engine Control) / Engine Coolant / EC
ECA (Electronic Control Assembly) / Powertrain Control Module / PCM
ECL (Engine Coolant Level) / Engine Coolant Level / ECL
ECM (Engine Control Module) / Engine Control Module / ECM

ECT (Engine Coolant Temperature) / Engine Coolant Temperature / ECT
ECT (Engine Coolant Temperature) Sender / Engine Coolant Temperature Sensor / ECT Sensor
ECT (Engine Coolant Temperature) Sensor / Engine Coolant Temperature Sensor / ECT Sensor
ECT (Engine Coolant Temperature) Switch / Engine Coolant Temperature Switch / ECT Switch
ECU4 (Electronic Control Unit 4) / Powertrain Control Module / PCM

EDF (Electro-Drive Fan) Control / Fan Control / FC
EDIS (Electronic Distributor Ignition / Distributor Ignition System / DI System
System)
EDIS (Electronic Distributor Ignition / Distributor Ignition Control Module / Distributor ICM
System) Module
EDIS (Electronic Distributorless Ignition / Electronic Ignition System / EI System
System)
EEC (Electronic Engine Control) / Engine Control / EC

EEC (Electronic Engine Control) Processor / Powertrain Control Module / PCM
EECS (Evaporative Emission Control / Evaporative Emission System / EVAP System
System)
EEPROM (Electrically Erasable / Electrically Erasable Programmable / EEPROM
Programmable Read Only Memory) / Read Only Memory
EFE (Early Fuel Evaporation) / Early Fuel Evaporation / EFE

EFI (Electronic Fuel Injection) / Multiport Fuel Injection / MFI

EFI (Electronic Fuel Injection) / Throttle Body Fuel Injection / TBI

EFT (Engine Fuel Temperature) / Engine Fuel Temperature / EFT

EFT (Engine Fuel Temperature) Sensor / Engine Fuel Temperature Sensor / EFT Sensor

EGO (Exhaust Gas Oxygen) Sensor / Oxygen Sensor / O2S

EGOS (Exhaust Gas Oxygen Sensor) / Oxygen Sensor / O2S

EGR (Exhaust Gas Recirculation) / Exhaust Gas Recirculation / EGR

EGR (Exhaust Gas Recirculation) / Exhaust Gas Recirculation Diagnostic / EGR Diagnostic Valve
Diagnostic Valve / Valve

EGR (Exhaust Gas Recirculation) System / Exhaust Gas Recirculation System / EGR System

EGR (Exhaust Gas Recirculation) Thermal / Exhaust Gas Recirculation Thermal / EGR TVV

Vacuum Valve / Vacuum Valve

EGR (Exhaust Gas Recirculation) Valve / Exhaust Gas Recirculation Valve / EGR Valve

EGR TVV (Exhaust Gas Recirculation / Exhaust Gas Recirculation Thermal / EGR TVV

Thermal Vacuum Valve) / Vacuum Valve

EGRT (Exhaust Gas Recirculation / Exhaust Gas Recirculation Temperature / EGRT

Temperature)

EGRT (Exhaust Gas Recirculation / Exhaust Gas Recirculation Temperature / EGRT Sensor

Temperature) Sensor / Sensor

EGRV (Exhaust Gas Recirculation Valve) / Exhaust Gas Recirculation Valve / EGR Valve

EGRVC (Exhaust Gas Recirculation Valve / Exhaust Gas Recirculation Valve / EGR Valve Control
Control) / Control

EGS (Exhaust Gas Sensor) / Oxygen Sensor / O2S

EI (Electronic Ignition) (With Distributor) / Distributor Ignition / DI

EI (Electronic Ignition) (Without Distributor) / Electronic Ignition / EI

Electrically Erasable Programmable Read / Electrically Erasable Programmable / EEPROM

Only Memory / Read Only Memory

Electronic Automatic Temperature Control / Climate Control / CC

Electronic Engine Control / Electronic Engine Control / Electronic EC

Electronic Ignition / Electronic Ignition / EI

Electronic Spark Advance / Ignition Control / IC

Electronic Spark Timing / Ignition Control / IC

EM (Engine Modification) / Engine Modification / EM

EMR (Engine Maintenance Reminder) / Service Reminder Indicator / SRI

Engine Control / Engine Control / EC

Engine Control Module / Engine Control Module / ECM

Engine Coolant Fan Control / Fan Control / FC

Engine Coolant Level / Engine Coolant Level / ECL

Engine Coolant Level Indicator / Engine Coolant Level Indicator / ECL Indicator

Engine Coolant Temperature / Engine Coolant Temperature / ECT

Engine Coolant Temperature Sender / Engine Coolant Temperature Sensor / ECT Sensor

Engine Coolant Temperature Sensor / Engine Coolant Temperature Sensor / ECT Sensor

Engine Coolant Temperature Switch / Engine Coolant Temperature Switch / ECT Switch

Engine Fuel Temperature / Engine Fuel Temperature / EFT

Engine Fuel Temperature Sensor / Engine Fuel Temperature Sensor / EFT Sensor

EVAP (Evaporate Emission) CANP / Evaporative Emission Canister Purge / EVAP Canister Purge
(Canister Purge)

EVAP (Evaporative Emission) / Evaporative Emission / EVAP

EVAP (Evaporative Emission) Canister / Evaporative Emission Canister / EVAP Canister

EVAP (Evaporative Emission) Purge Valve / Evaporative Emission Canister Purge Valve / EVAP Canister Purge Valve
Evaporative Emission / Evaporative Emission / EVAP
Evaporative Emission Canister / Evaporative Emission Canister / EVAP Canister
EVP (Exhaust Gas Recirculation Valve / Exhaust Gas Recirculation Valve / EGR Valve Position Sensor
Position) Sensor / Position Sensor

EVR (Exhaust Gas Recirculation Vacuum / Exhaust Gas Recirculation Vacuum / EGR Vacuum Regulator Valve
Regulator) Solenoid / Regulator Valve
EVRV (Exhaust Gas Recirculation Vacuum / Exhaust Gas Recirculation Vacuum / EGR Vacuum Regulator Valve
Regulator Valve) / Regulator Valve
Exhaust Gas Recirculation / Exhaust Gas Recirculation / EGR
Exhaust Gas Recirculation Temperature / Exhaust Gas Recirculation Temperature / EGRT
Exhaust Gas Recirculation Temperature / Exhaust Gas Recirculation Temperature / EGRT Sensor
Sensor / Sensor

Exhaust Gas Recirculation Vacuum / Exhaust Gas Recirculation Vacuum / EGR Vacuum Regulator Valve
Regulator Valve / Regulator Valve
Exhaust Gas Recirculation Vacuum / Exhaust Gas Recirculation Vacuum / EGR Vacuum Regulator Solenoid
Solenoid Valve Regulator / Regulator Solenoid Valve / Valve
Exhaust Gas Recirculation Valve / Exhaust Gas Recirculation Valve / EGR Valve
Exhaust Pressure / Exhaust Pressure / EP
F4WD (Full Time Four Wheel Drive) / Full Time Four Wheel Drive / F4WD

Fan Control / Fan Control / FC
Fan Control Module / Fan Control Module / FC Module
Fan Control Relay / Fan Control Relay / FC Relay
Fan Motor Control Relay / Fan Control Relay / FC Relay
Fast Idle Thermo Valve / Idle Air Control Thermal Valve / IAC Thermal Valve

FBC (Feed Back Carburetor) / Carburetor / CARB
FBC (Feed Back Control) / Mixture Control / MC
FC (Fan Control) / Fan Control / FC
FC (Fan Control) Relay / Fan Control Relay / FC Relay
FEEPROM (Flash Electrically Erasable / Flash Electrically Erasable Programmable / FEEPROM
Programmable Read Only Memory) / Read Only Memory

FEPRM (Flash Erasable Programmable Read / Flash Erasable Programmable Read Only / FEPRM
Only Memory) / Memory
FF (Flexible Fuel) / Flexible Fuel / FF
FI (Fuel Injection) / Central Multiport Fuel Injection / Central MFI
FI (Fuel Injection) / Continuous Fuel Injection / CFI
FI (Fuel Injection) / Direct Fuel Injection / DFI

FI (Fuel Injection) / Indirect Fuel Injection / IFI
FI (Fuel Injection) / Multiport Fuel Injection / MFI
FI (Fuel Injection) / Sequential Multiport Fuel Injection / SFI
FI (Fuel Injection) / Throttle Body Fuel Injection / TBI
Flame Ionization Detector / Flame Ionization Detector / FID

Flash EEPROM (Electrically Erasable / Flash Electrically Erasable Programmable / FEEPROM
Programmable Read Only Memory) / Read Only Memory
Flash EPROM (Erasable Programmable Read / Flash Erasable Programmable / FEPRM
Only Memory) / Read Only Memory
Flexible Fuel / Flexible Fuel / FF
Flexible Fuel Sensor / Flexible Fuel Sensor / FF Sensor
Four Wheel Drive / Four Wheel Drive / 4WD

Four Wheel Drive / Full Time Four Wheel Drive / F4WD

Four Wheel Drive / Selectable Four Wheel Drive / S4WD
Fourth Gear / Fourth Gear / 4GR
FP (Fuel Pump) / Fuel Pump / FP
FP (Fuel Pump) Module / Fuel Pump Module / FP Module

Front Wheel Drive / Front Wheel Drive / FWD
FRP (Fuel Rail Pressure) / Fuel Rail Pressure / FRP
FRP (Fuel Rail Pressure) Sensor / Fuel Rail Pressure Sensor / FRP Sensor
FRT (Fuel Rail Temperature) / Fuel Rail Temperature / FRT
FRT (Fuel Rail Temperature) Sensor / Fuel Rail Temperature Sensor / FRT Sensor

FT (Fuel Trim) / Fuel Trim / FT
FTP (Fuel Tank Pressure) / Fuel Tank Pressure / FTP
FTP (Fuel Tank Pressure) Sensor / Fuel Tank Pressure Sensor / FTP Sensor
FTT (Fuel Tank Temperature) / Fuel Tank Temperature / FTT
FTT (Fuel Tank Temperature) Sensor / Fuel Tank Temperature Sensor / FTT Sensor

Fuel Charging Station / Throttle Body / TB
Fuel Concentration Sensor / Flexible Fuel Sensor / FF Sensor
Fuel Injection / Central Multiport Fuel Injection / Central MFI
Fuel Injection / Continuous Fuel Injection / CFI
Fuel Injection / Direct Fuel Injection / DFI

Fuel Injection / Indirect Fuel Injection / IFI
Fuel Injection / Multiport Fuel Injection / MFI
Fuel Injection / Sequential Multiport Fuel Injection / SFI
Fuel Injection / Throttle Body Fuel Injection / TBI
Fuel Level Sensor / Fuel Level Sensor / Fuel Level Sensor

Fuel Module / Fuel Pump Module / FP Module
Fuel Pressure / Fuel Pressure / Fuel Pressure
Fuel Pressure Regulator / Fuel Pressure Regulator / Fuel Pressure Regulator
Fuel Pump / Fuel Pump / FP
Fuel Pump Relay / Fuel Pump Relay / FP Relay

Fuel Quality Sensor / Flexible Fuel Sensor / FF Sensor
Fuel Rail Pressure / Fuel Rail Pressure / FRP
Fuel Rail Pressure Sensor / Fuel Rail Pressure Sensor / FRP Sensor
Fuel Rail Temperature / Fuel Rail Temperature / FRT
Fuel Rail Temperature Sensor / Fuel Rail Temperature Sensor / FRT Sensor

Fuel Regulator / Fuel Pressure Regulator / Fuel Pressure Regulator
Fuel Sender / Fuel Pump Module / FP Module
Fuel Sensor / Fuel Level Sensor / Fuel Level Sensor
Fuel Tank Pressure / Fuel Tank Pressure / FTP
Fuel Tank Pressure Sensor / Fuel Tank Pressure Sensor / FTP Sensor

Fuel Tank Temperature / Fuel Tank Temperature / FTT
Fuel Tank Temperature Sensor / Fuel Tank Temperature Sensor / FTT Sensor
Fuel Tank Unit / Fuel Pump Module / FP Module
Fuel Trim / Fuel Trim / FT
Full Throttle / Wide Open Throttle / WOT

Full Time Four Wheel Drive / Full Time Four Wheel Drive / F4WD
FWD (Front Wheel Drive) / Front Wheel Drive / FWD
GCM (Governor Control Module) / Governor Control Module / GCM
GEM (Governor Electronic Module) / Governor Control Module / GCM
GEN (Generator) / Generator / GEN

Glow Plug / Glow Plug / Glow Plug
GND (Ground) / Ground / GND
Governor / Governor / Governor
Governor Control Module / Governor Control Module / GCM
Governor Electronic Module / Governor Control Module / GCM

GPM (Gram Per Mile) / Gram Per Mile / GPM
Gram Per Mile / Gram Per Mile / GPM
GRD (Ground) / Ground / GND
Ground / Ground / GND
HC (Hydrocarbon) / Hydrocarbon / HC

HCDS (High Clutch Drum Speed) / High Clutch Drum Speed / HCDS
HCDS (High Clutch Drum Speed) Sensor / High Clutch Drum Speed Sensor / HCDS Sensor
Heated Oxygen Sensor / Heated Oxygen Sensor / HO2S
HEDF (High Electro-Drive Fan) Control / Fan Control / FC
HEGO (Heated Exhaust Gas Oxygen) Sensor / Heated Oxygen Sensor / HO2S

HEI (High Energy Ignition) / Distributor Ignition / DI
High Clutch Drum Speed / High Clutch Drum Speed / HCDS
High Clutch Drum Speed Sensor / High Clutch Drum Speed Sensor / HCDS Sensor
High Pressure Cutoff Switch / High Pressure Cutoff Switch / HPC Switch
High Speed FC (Fan Control) Switch / High Speed Fan Control Switch / High Speed FC Switch

HO2S (Heated Oxygen Sensor) / Heated Oxygen Sensor / HO2S
HOS (Heated Oxygen Sensor) / Heated Oxygen Sensor / HO2S
Hot Wire Anemometer / Mass Airflow Sensor / MAF Sensor
HPC (High Pressure Cutoff) Switch / High Pressure Cutoff Switch / HPC Switch
Hydrocarbon / Hydrocarbon / HC

I/M (Inspection and Maintenance) / Inspection and Maintenance / I/M
IA (Intake Air) / Intake Air / IA
IA (Intake Air) Duct / Intake Air Duct / IA Duct
IAC (Idle Air Control) / Idle Air Control / IAC
IAC (Idle Air Control) Thermal Valve / Idle Air Control Thermal Valve / IAC Thermal Valve

IAC (Idle Air Control) Valve / Idle Air Control Valve / IAC Valve
IACV (Idle Air Control Valve) / Idle Air Control Valve / IAC Valve
IAT (Intake Air Temperature) / Intake Air Temperature / IAT
IAT (Intake Air Temperature) Sensor / Intake Air Temperature Sensor / IAT Sensor
IATS (Intake Air Temperature Sensor) / Intake Air Temperature Sensor / IAT Sensor

IC (Ignition Control) / Ignition Control / IC
ICM (Ignition Control Module) / Ignition Control Module / ICM
ICP (Injection Control Pressure) / Injection Control Pressure / ICP
IDFI (Indirect Fuel Injection) / Indirect Fuel Injection / IFI
IDI (Indirect Diesel Injection) / Indirect Fuel Injection / IFI

IDI (Integrated Direct Ignition) / Electronic Ignition / EI
Idle Air Bypass Control / Idle Air Control / IAC
Idle Air Control / Idle Air Control / IAC
Idle Air Control Valve / Idle Air Control Valve / IAC Valve
Idle Speed Control / Idle Air Control / IAC

Idle Speed Control / Idle Speed Control / ISC
Idle Speed Control Actuator / Idle Speed Control Actuator / ISC Actuator
IFI (Indirect Fuel Injection) / Indirect Fuel Injection / IFI

IFS (Inertia Fuel Shutoff) / Inertia Fuel Shutoff / IFS
Ignition Control / Ignition Control / IC

Ignition Control Module / Ignition Control Module / ICM
IMRC (Intake Manifold Runner Control) / Intake Manifold Runner Control / IMRC
IMT (Intake Manifold Tuning) Valve / Intake Manifold Tuning Valve / IMT Valve
In-Tank Module / Fuel Pump Module / FP Module
Indirect Fuel Injection / Indirect Fuel Injection / IFI

Inertia Fuel — Shutoff Switch / Inertia Fuel Shutoff Switch / IFS Switch
Inertia Fuel Shutoff / Inertia Fuel Shutoff / IFS
Inertia Switch / Inertia Fuel Shutoff Switch / IFS Switch
Injection Control Pressure / Injection Control Pressure / ICP
Injector Pressure Sensor / Fuel Rail Pressure Sensor / FRP Sensor

Input Shaft Speed / Input Shaft Speed / ISS
Input Shaft Speed / Input Shaft Speed / ISS
Inspection and Maintenance / Inspection and Maintenance / I/M
INT (Integrator) / Short Term Fuel Trim / Short Term FT
Intake Air / Intake Air / IA

Intake Air Duct / Intake Air Duct / IA Duct
Intake Air Temperature / Intake Air Temperature / IAT
Intake Air Temperature Sensor / Intake Air Temperature Sensor / IAT Sensor
Intake Manifold Absolute Pressure Sensor / Manifold Absolute Pressure Sensor / MAP Sensor
Intake Manifold Runner Control / Intake Manifold Runner Control / IMRC

Intake Manifold Tuning Valve / Intake Manifold Tuning Valve / IMT Valve
Integrated Relay Module / Relay Module / RM
Integrator / Short Term Fuel Trim / Short Term FT
Inter Cooler / Charge Air Cooler / CAC
ISC (Idle Speed Control) / Idle Air Control / IAC

ISC (Idle Speed Control) / Idle Speed Control / ISC
ISC (Idle Speed Control) Actuator / Idle Speed Control Actuator / ISC Actuator
ISC (Idle Speed Control) Solenoid Vacuum / Idle Speed Control Solenoid Vacuum / ISC Solenoid Vacuum Valve / Valve
ISC BPA (Idle Speed Control Bypass Air) / Idle Air Control / IAC
ISS (Input Shaft Speed) / Input Shaft Speed / ISS

K-Jetronic / Continuous Fuel Injection / CFI
KAM (Keep Alive Memory) / Nonvolatile Random Access Memory / NVRAM
KAM (Keep Alive Memory) / Keep Alive Random Access Memory / Keep Alive RAM
KE-Jetronic / Continuous Fuel Injection / CFI
KE-Motronic / Continuous Fuel Injection / CFI

Knock Sensor / Knock Sensor / KS
KS (Knock Sensor) / Knock Sensor / KS
L-Jetronic / Multiport Fuel Injection / MFI
Lambda / Oxygen Sensor / O2S
LH-Jetronic / Multiport Fuel Injection / MFI

Light Off Catalyst / Warm Up Three Way Catalytic Converter / WU-TWC
Light Off Catalyst / Warm Up Oxidation Catalytic Converter / WU-OC
Line Pressure Control Solenoid Valve / Line Pressure Control Solenoid Valve / Line PC Solenoid Valve
LOAD (Calculated Load Value) / Calculated Load Value / LOAD
Lock Up Relay / Torque Converter Clutch Relay / TCC Relay

Long Term FT (Fuel Trim) / Long Term Fuel Trim / Long Term FT
Long Term Fuel Trim / Long Term Fuel Trim / Long Term FT
Low Speed FC (Fan Control) Switch / Low Speed Fan Control Switch / Low Speed FC Switch
LUS (Lock Up Solenoid) Valve / Torque Converter Clutch Solenoid Valve / TCC Solenoid Valve
M/C (Mixture Control) / Mixture Control / MC

MAF (Mass Airflow) / Mass Airflow / MAF
MAF (Mass Airflow) Sensor / Mass Airflow Sensor / MAF Sensor
Malfunction Indicator Lamp / Malfunction Indicator Lamp / MIL
Manifold Absolute Pressure / Manifold Absolute Pressure / MAP
Manifold Absolute Pressure Sensor / Manifold Absolute Pressure Sensor / MAP Sensor

Manifold Differential Pressure / Manifold Differential Pressure / MDP
Manifold Surface Temperature / Manifold Surface Temperature / MST
Manifold Vacuum Zone / Manifold Vacuum Zone / MVZ
Manual Lever Position Sensor / Transmission Range Sensor / TR Sensor
MAP (Manifold Absolute Pressure) / Manifold Absolute Pressure / MAP

MAP (Manifold Absolute Pressure) Sensor / Manifold Absolute Pressure Sensor / MAP Sensor
MAPS (Manifold Absolute Pressure Sensor) / Manifold Absolute Pressure Sensor / MAP Sensor
Mass Airflow / Mass Airflow / MAF
Mass Airflow Sensor / Mass Airflow Sensor / MAF Sensor
MAT (Manifold Air Temperature) / Intake Air Temperature / IAT

MATS (Manifold Air Temperature Sensor) / Intake Air Temperature Sensor / IAT Sensor
MC (Mixture Control) / Mixture Control / MC
MCS (Mixture Control Solenoid) / Mixture Control Solenoid / MC Solenoid
MCU (Microprocessor Control Unit) / Powertrain Control Module / PCM
MDP (Manifold Differential Pressure) / Manifold Differential Pressure / MDP

MFI (Multiport Fuel Injection) / Multiport Fuel Injection / MFI
MIL (Malfunction Indicator Lamp) / Malfunction Indicator Lamp / MIL
Mixture Control / Mixture Control / MC
MLPS (Manual Lever Position Sensor) / Transmission Range Sensor / TR Sensor
Modes / Diagnostic Test Mode / DTM

Mono-Jetronic / Throttle Body Fuel Injection / TBI
Mono-Motronic / Throttle Body Fuel Injection / TBI
Monotronic / Throttle Body Fuel Injection / TBI
Motronic / Multiport Fuel Injection / MFI
Motronic-Pressure / Multiport Fuel Injection / MFI

MPI (Multipoint Injection) / Multiport Fuel Injection / MFI
MPI (Multiport Injection) / Multiport Fuel Injection / MFI
MRPS (Manual Range Position Switch) / Transmission Range Switch / TR Switch
MST (Manifold Surface Temperature) / Manifold Surface Temperature / MST
Multiport Fuel Injection / Multiport Fuel Injection / MFI

MVZ (Manifold Vacuum Zone) / Manifold Vacuum Zone / MVZ
NDS (Neutral Drive Switch) / Park/Neutral Position Switch / PNP Switch
Neutral Safety Switch / Park/Neutral Position Switch / PNP Switch
NGS (Neutral Gear Switch) / Park/Neutral Position Switch / PNP Switch
Nitrogen Oxides / Nitrogen Oxides / NOX

Non Dispersive Infrared / Non Dispersive Infrared / NDIR
Non Volatile Random Access Memory / Non Volatile Random Access Memory / NVRAM
NOX (Nitrogen Oxides) / Nitrogen Oxides / NOX
NPS (Neutral Position Switch) / Park/Neutral Position Switch / PNP Switch

NVM (Non Volatile Memory) / Non Volatile Random Access Memory / NVRAM

NVRAM (Non Volatile Random Access / Non Volatile Random Access Memory / NVRAM Memory)

O2 (Oxygen) / Oxygen / O2

O2 (Oxygen) Sensor / Oxygen Sensor / O2S

O2S (Oxygen Sensor) / Oxygen Sensor / O2S

OBD (On Board Diagnostic) / On Board Diagnostic / OBD

OC (Oxidation Catalyst) / Oxidation Catalytic Converter / OC

ODS (Overdrive Drum Speed) / Overdrive Drum Speed / ODS

ODS (Overdrive Drum Speed) Sensor / Overdrive Drum Speed Sensor / ODS Sensor

Oil Pressure Sender / Engine Oil Pressure Sensor / EOP Sensor

Oil Pressure Sensor / Engine Oil Pressure Sensor / EOP Sensor

Oil Pressure Switch / Engine Oil Pressure Switch / EOP Switch

OL (Open Loop) / Open Loop / OL

On Board Diagnostic / On Board Diagnostic / OBD

Open Loop / Open Loop / OL

OS (Oxygen Sensor) / Oxygen Sensor / O2S

OSS (Output Shaft Speed) Sensor / Output Shaft Speed Sensor / OSS Sensor

Output Driver / Driver / Driver

Overdrive Drum Speed / Overdrive Drum Speed / ODS

Overdrive Drum Speed Sensor / Overdrive Drum Speed Sensor / ODS Sensor

Output Shaft Speed / Output Shaft Speed / OSS

Output Shaft Speed Sensor / Output Shaft Speed Sensor / OSS Sensor

Oxidation Catalytic Converter / Oxidation Catalytic Converter / OC

OXS (Oxygen Sensor) Indicator / Service Reminder Indicator / SRI

Oxygen / Oxygen / O2

Oxygen Sensor / Oxygen Sensor / O2S

P- (Pressure) Sensor / Manifold Absolute Pressure Sensor / MAP Sensor

P/N (Park/Neutral) / Park/Neutral Position / PNP

P/S (Power Steering) Pressure Switch / Power Steering Pressure Switch / PSP Switch

PAIR (Pulsed Secondary Air Injection) / Pulsed Secondary Air Injection / PAIR

Parameter Identification / Parameter Identification / PID

Park/Neutral Position / Park/Neutral Position / PNP

PC (Pressure Control) Solenoid Valve / Pressure Control Solenoid Valve / PC Solenoid Valve

PCM (Powertrain Control Module) / Powertrain Control Module / PCM

PCV (Positive Crankcase Ventilation) / Positive Crankcase Ventilation / PCV

PCV (Positive Crankcase Ventilation) Valve / Positive Crankcase Ventilation Valve / PCV Valve

Percent Alcohol Sensor / Flexible Fuel Sensor / FF Sensor

Periodic Trap Oxidizer / Periodic Trap Oxidizer PTOX

PFE (Pressure Feedback Exhaust) Gas / Feedback Pressure Exhaust Gas / Feedback Pressure EGR Sensor

Recirculation Sensor / Recirculation Sensor

PFI (Port Fuel Injection) / Multiport Fuel Injection / MFI

PG (Pulse Generator) / Vehicle Speed Sensor / VSS

PGM-FI (Programmed Fuel Injection) / Multiport Fuel Injection / MFI

PID (Parameter Identification) / Parameter Identification / PID

PIP (Position Indicator Pulse) / Crankshaft Position / CKP

PNP (Park/Neutral Position) / Park/Neutral Position / PNP

Positive Crankcase Ventilation / Positive Crankcase Ventilation / PCV

Positive Crankcase Ventilation Valve / Positive Crankcase Ventilation Valve / PCV Valve
Power Steering Control / Power Steering Control / PSC
Power Steering Control Module / Power Steering Control Module / PSC Module
Power Steering Pressure / Power Steering Pressure / PSP
Power Steering Pressure Switch / Power Steering Pressure Switch / PSP Switch

Powertrain Control Module / Powertrain Control Module / PCM
PR (Pressure Relief) / Pressure Relief / PR
PR (Pressure Relief) Valve / Pressure Relief Valve / PR Valve
Pressure Control Solenoid Valve / Pressure Control Solenoid Valve / PC Solenoid Valve
Pressure Feedback EGR (Exhaust Gas / Feedback Pressure Exhaust Gas / Feedback Pressure EGR Recirculation) / Recirculation

Pressure Relief / Pressure Relief / PR
Pressure Relief Valve / Pressure Relief Valve / PR Valve
Pressure Sensor / Manifold Absolute Pressure Sensor / MAP Sensor
Pressure Feedback EGR (Exhaust Gas / Feedback Pressure Exhaust Gas / Feedback Pressure EGR System Recirculation) System / Recirculation System

Pressure Transducer EGR (Exhaust Gas / Pressure Transducer Exhaust Gas / Pressure Transducer EGR System Recirculation) System / Recirculation System
PRNDL (Park- Reverse- Neutral- Drive- Low) / Transmission Range / TR
Programmable Read Only Memory / Programmable Read Only Memory / PROM
PROM (Programmable Read Only Memory) / Programmable Read Only Memory / PROM

PSC (Power Steering Control) / Power Steering Control / PSC
PSC (Power Steering Control) Module / Power Steering Control Module / PSC Module
PSP (Power Steering Pressure) / Power Steering Pressure / PSP
PSP (Power Steering Pressure) Switch / Power Steering Pressure Switch / PSP Switch
PSPS (Power Steering Pressure Switch) / Power Steering Pressure Switch / PSP Switch

PTOX (Periodic Trap Oxidizer) / Periodic Trap Oxidizer / PTOX
Pulsair / Pulsed Secondary Air Injection / PAIR
Pulse Width Modulation / Pulse Width Modulation / PWM
Pulsed Secondary Air Injection / Pulsed Secondary Air Injection / PAIR
PWM (Pulse Width Modulation) / Pulse Width Modulation / PWM

QDM (Quad Driver Module) / Driver / Driver
Quad Driver Module / Driver / Driver
Radiator Fan Control / Fan Control / FC
Radiator Fan Relay / Fan Control Relay / FC Relay
RAM (Random Access Memory) / Random Access Memory / RAM

Random Access Memory / Random Access Memory / RAM
Read Only Memory / Read Only Memory / ROM
Rear Wheel Drive / Rear Wheel Drive / RWD

S4WD (Selectable Four Wheel Drive) / Selectable Four Wheel Drive / S4WD
SABV (Secondary Air Bypass Valve) / Secondary Air Injection Bypass Valve / AIR Bypass Valve

SACV (Secondary Air Check Valve) / Secondary Air Injection Check Valve / AIR Check Valve
SASV (Secondary Air Switching Valve) / Secondary Air Injection Switching Valve / AIR Switching Valve
SBEC (Single Board Engine Control) / Powertrain Control Module / PCM
SBS (Supercharger Bypass Solenoid) / Supercharger Bypass Solenoid / SCB Solenoid
SC (Supercharger) / Supercharger / SC

Scan Tool / Scan Tool / ST
SCB (Supercharger Bypass) / Supercharger Bypass / SCB

Secondary Air Bypass Valve / Secondary Air Injection Bypass Valve / AIR Bypass Valve
Secondary Air Check Valve / Secondary Air Injection Check Valve / AIR Check Valve
Secondary Air Injection / Secondary Air Injection / AIR

Secondary Air Injection Bypass / Secondary Air Injection Bypass / AIR Bypass
Secondary Air Injection Bypass Valve / Secondary Air Injection Bypass Valve / AIR Bypass Valve
Secondary Air Injection Diverter / Secondary Air Injection Diverter / AIR Diverter
Secondary Air Switching Valve / Secondary Air Injection Switching Valve / AIR Switching Valve
Secondary Air Injection Switching Valve / Secondary Air Injection Switching Valve / AIR Switching Valve

SEFI (Sequential Electronic Fuel Injection) / Sequential Multiport Fuel Injection / SFI
Selectable Four Wheel Drive / Selectable Four Wheel Drive / S4WD
Self Test / On Board Diagnostic / OBD
Self Test Codes / Diagnostic Trouble Code / DTC
Self Test Connector / Data Link Connector / DLC

Semi-Automatic Temperature Control / Climate Control / CC
Sequential Multiport Fuel Injection / Sequential Multiport Fuel Injection / SFI
Service Engine Soon / Service Reminder Indicator / SRI
Service Engine Soon / Malfunction Indicator Lamp / MIL
Service Reminder Indicator / Service Reminder Indicator / SRI

SFI (Sequential Fuel Injection) / Sequential Multiport Fuel Injection / SFI
Shift Solenoid / Shift Solenoid / SS
Shift Solenoid Valve / Shift Solenoid Valve / SS Valve
Short Term FT (Fuel Trim) / Short Term Fuel Trim / Short Term FT
Short Term Fuel Trim / Short Term Fuel Trim / Short Term FT

SLP (Selection Lever Position) / Transmission Range / TR
SMEC (Single Module Engine Control) / Powertrain Control Module / PCM
Smoke Puff Limiter / Smoke Puff Limiter / SPL
Spark Plug / Spark Plug / Spark Plug
SPI (Single Point Injection) / Throttle Body Fuel Injection / TBI

SPL (Smoke Puff Limiter) / Smoke Puff Limiter / SPL
SRI (Service Reminder Indicator) / Service Reminder Indicator / SRI
SRT (System Readiness Test) / System Readiness Test / SRT
SS (Shift Solenoid) / Shift Solenoid / SS
ST (Scan Tool) / Scan Tool / ST

Supercharger / Supercharger / SC
Supercharger Bypass / Supercharger Bypass / SCB
Sync Pickup / Camshaft Position / CMP
System Readiness Test / System Readiness Test / SRT
TAB (Thermactor Air Bypass) / Secondary Air Injection Bypass / AIR Bypass

TAC (Throttle Actuator Control) / Throttle Actuator Control / TAC
TAC (Throttle Actuator Control) Module / Throttle Actuator Control Module / TAC Module
TAD (Thermactor Air Diverter) / Secondary Air Injection Diverter / AIR Diverter
TB (Throttle Body) / Throttle Body / TB
TBI (Throttle Body Fuel Injection) / Throttle Body Fuel Injection / TBI

TBT (Throttle Body Temperature) / Intake Air Temperature / IAT
TC (Turbocharger) / Turbocharger / TC
TC (Turbocharger) Wastegate / Turbocharger Wastegate / TC Wastegate
TC (Turbocharger) Wastegate Regulating Valve / Turbocharger Wastegate Regulating Valve / TC Wastegate Regulating Valve
TCC (Torque Converter Clutch) / Torque Converter Clutch / TCC

TCC (Torque Converter Clutch) Relay / Torque Converter Clutch Relay / TCC Relay
TCC (Torque Converter Clutch) Solenoid / Torque Converter Clutch Solenoid / TCC Solenoid
TCC (Torque Converter Clutch) Solenoid Valve / Torque Converter Clutch Solenoid Valve / TCC Solenoid Valve
TCCP (Torque Converter Clutch Pressure) / Torque Converter Clutch Pressure / TCCP
TCM (Transmission Control Module) / Transmission Control Module / TCM

TE (Thermal Expansion) / Thermal Expansion / TE
TE (Thermal Expansion) Valve / Thermal Expansion Valve / TE Valve
TFI (Thick Film Ignition) / Distributor Ignition / DI
TFI (Thick Film Ignition) Module / Ignition Control Module / ICM
TFP (Transmission Fluid Pressure) / Transmission Fluid Pressure / TFP

TFT (Transmission Fluid Temperature) Sensor / Transmission Fluid Temperature Sensor / TFT Sensor
Thermac / Secondary Air Injection / AIR
Thermac Air Cleaner / Air Cleaner / ACL
Thermactor / Secondary Air Injection / AIR
Thermactor Air Bypass / Secondary Air Injection Bypass / AIR Bypass

Thermactor Air Diverter / Secondary Air Injection Diverter / AIR Diverter
Thermactor II / Pulsed Secondary Air Injection / PAIR
Thermal Expansion / Thermal Expansion / TE
Thermal Expansion Valve / Thermal Expansion Valve / TE Valve
Thermal Vacuum Switch / Thermal Vacuum Valve / TVV

Thermal Vacuum Valve / Thermal Vacuum Valve / TVV
Third Gear / Third Gear / 3GR
Three Way + Oxidation Catalytic Converter / Three Way + Oxidation Catalytic Converter / TWC+OC
Three Way Catalytic Converter / Three Way Catalytic Converter / TWC
Throttle Actuator / Throttle Actuator / Throttle Actuator

Throttle Actuator Control / Throttle Actuator Control / TAC
Throttle Actuator Control Module / Throttle Actuator Control Module / TAC Module
Throttle Body / Throttle Body / TB
Throttle Body Fuel Injection / Throttle Body Fuel Injection / TBI
Throttle Opener / Idle Speed Control / ISC

Throttle Opener Vacuum Switching Valve / Idle Speed Control Solenoid Vacuum Valve / ISC Solenoid Vacuum Valve
Throttle Opener VSV (Vacuum Switching Valve) / Idle Speed Control Solenoid Vacuum Valve / ISC Solenoid Vacuum Valve
Throttle Position / Throttle Position / TP
Throttle Position Sensor / Throttle Position Sensor / TP Sensor
Throttle Position Switch / Throttle Position Switch / TP Switch

Throttle Potentiometer / Throttle Position Sensor / TP Sensor
TOC (Trap Oxidizer — Continuous) / Continuous Trap Oxidizer / CTOX
TOP (Trap Oxidizer — Periodic) / Periodic Trap Oxidizer / PTOX
Torque Converter Clutch / Torque Converter Clutch / TCC
Torque Converter Clutch Pressure / Torque Converter Clutch Pressure / TCCP

Torque Converter Clutch Relay / Torque Converter Clutch Relay / TCC Relay
Torque Converter Clutch Solenoid / Torque Converter Clutch Solenoid / TCC Solenoid
Torque Converter Clutch Solenoid Valve / Torque Converter Clutch Solenoid Valve / TCC Solenoid Valve
TP (Throttle Position) / Throttle Position / TP
TP (Throttle Position) Sensor / Throttle Position Sensor / TP Sensor

TP (Throttle Position) Switch / Throttle Position Switch / TP Switch
TPI (Tuned Port Injection) / Multiport Fuel Injection / MFI

TPNP (Transmission Park Neutral Position) / Park/Neutral Position / PNP
TPS (Throttle Position Sensor) / Throttle Position Sensor / TP Sensor
TPS (Throttle Position Switch) / Throttle Position Switch / TP Switch

TR (Transmission Range) / Transmission Range / TR
Track Road Load Horsepower / Track Road Load Horsepower / TRLHP
Transmission Control Module / Transmission Control Module / TCM
Transmission Fluid Pressure / Transmission Fluid Pressure / TFP
Transmission Fluid Temperature Sensor / Transmission Fluid Temperature Sensor / TFT Sensor

Transmission Park Neutral Position / Park/Neutral Position / PNP
Transmission Position Switch / Transmission Range Switch / TR Switch
Transmission Range Selection / Transmission Range / TR
Transmission Range Sensor / Transmission Range Sensor / TR Sensor
TRLHP (Track Road Load Horsepower) / Track Road Load Horsepower / TRLHP

TRS (Transmission Range Selection) / Transmission Range TR
TRSS (Transmission Range Selection Switch) / Transmission Range Switch / TR Switch
TSS (Turbine Shaft Speed) Sensor / Turbine Shaft Speed Sensor / TSS Sensor
Tuned Port Injection / Multiport Fuel Injection / MFI
Turbine Shaft Speed Sensor / Turbine Shaft Speed Sensor / TSS Sensor

Turbo (Turbocharger) / Turbocharger / TC
Turbocharger / Turbocharger / TC
Turbocharger Wastegate / Turbocharger Wastegate / TC Wastegate
Turbocharger Wastegate Regulating Valve / Turbocharger Wastegate Regulating Valve / TC Wastegate Regulating Valve
TVS (Thermal Vacuum Switch) / Thermal Vacuum Valve / TVV

TVV (Thermal Vacuum Valve) / Thermal Vacuum Valve / TVV
TWC (Three Way Catalytic Converter) / Three Way Catalytic Converter / TWC
TWC + OC (Three Way + Oxidation Catalytic / Three Way + Oxidation Catalytic Converter / TWC+OC Converter)
VAC (Vacuum) Sensor / Manifold Differential Pressure Sensor / MDP Sensor
Vacuum Switches / Manifold Vacuum Zone Switch / MVZ Switch

VAF (Volume Airflow) / Volume Airflow / VAF
Valve Position EGR (Exhaust Gas / Valve Position Exhaust Gas Recirculation / Valve Position EGR System Recirculation) System / System
Vane Airflow / Volume Airflow / VAF
Variable Control Relay Module / Variable Control Relay Module / VCRM
Variable Fuel Sensor / Flexible Fuel Sensor / FF Sensor

VAT (Vane Air Temperature) / Intake Air Temperature / IAT
VCC (Viscous Converter Clutch) / Torque Converter Clutch / TCC
VCM (Vehicle Control Module) / Vehicle Control Module / VCM
VCRM (Variable Control Relay Module) / Variable Control Relay Module / VCRM
Vehicle Control Module / Vehicle Control Module / VCM

Vehicle Identification Number / Vehicle Identification Number / VIN
Vehicle Speed Sensor / Vehicle Speed Sensor / VSS
VIN (Vehicle Identification Number) / Vehicle Identification Number / VIN
VIP (Vehicle In Process) Connector / Data Link Connector / DLC
Viscous Converter Clutch / Torque Converter Clutch / TCC

Voltage Regulator / Voltage Regulator / VR
Volume Airflow / Volume Airflow / VAF
VR (Voltage Regulator) / Voltage Regulator / VR
VSS (Vehicle Speed Sensor) / Vehicle Speed Sensor / VSS

VSV (Vacuum Solenoid Valve) (Canister) / Evaporative Emission Canister Purge Valve / EVAP Canister Purge Valve

VSV (Vacuum Solenoid Valve) (EVAP) / Evaporative Emission Canister Purge Valve / EVAP Canister Purge Valve
VSV (Vacuum Solenoid Valve) (Throttle) / Idle Speed Control Solenoid Vacuum Valve / ISC Solenoid Vacuum Valve
Warm Up Oxidation Catalytic Converter / Warm Up Oxidation Catalytic Converter / WU-OC
Warm Up Three Way Catalytic Converter / Warm Up Three Way Catalytic Converter / WU-OC
Wide Open Throttle / Wide Open Throttle / WOT

WOT (Wide Open Throttle) / Wide Open Throttle / WOT
WOTS (Wide Open Throttle Switch) / Wide Open Throttle Switch / WOT Switch
WU-TWC (Warm Up Three Way Catalytic / Warm Up Three Way Catalytic Converter / WU-TWC
Converter)
WU-OC (Warm Up Oxidation Catalytic / Warm Up Oxidation Catalytic Converter / WU-OC
Converter)

Bold indicates new/revised entry