

<b>Код</b>	<b>Расшифровка</b>
11	APS1
12	Датчик буста
13	BARO SNSR
14	FUEL TEMP
15	CLT TEMP SNSR
16	AIR TEMP SNSR
17	VSS
18	NE SNSR (SUB)
21	NE SNSR (MAIN)
23	IDLE SW 1
24	IDLE SW 2
25	TPS
26	CSP SNSR
27	APS2
28	T/M SHIFT SW
31	Связь по шине CAN
41	THRT VAL SOL
42	THRT VAL SOL2
43	TCV
46	INJ ADJ V
48	GE
49	OVER BOOST
51	EGR POS. SNSR
52	VGT CONT. PRS.
54	Связь с иммобилизатором
63	ECU FAIL