

Код	Расшифровка
12	Normal
13	O2 Sensor
14	Water Temperature Sensor
15	Water Temperature Sensor
21	Throttle Position Sensor
22	Throttle Position Sensor
23	Air Temperature Sensor
24	Vehicle Speed Sensor
25	Air Temperature Sensor
26	Oxygen sensor Malfunction Bank2
26	Oxygen sensor Malfunction Bank2
27	Compensation Resistance Signal (Diesel)
28	Glow Plug Relay Signal (Diesel)
31	Manifold Pressure Sensor
31	Boost Sensor Signal (Turbo)
32	Manifold Pressure Sensor
32	Boost Sensor Signal (Turbo)
33	Mass Airflow Sensor
34	Mass Airflow Sensor
35	NE Sensor (Diesel only)
41	Timer Control Valve Signal (Diesel)
41	Ignition signal system
42	Crank Angle Sensor
43	Knock Sensor circuit malfunction
43	Starter Signal (Diesel)
44	Idle switch
45	Idle Switch
51	Exhaust Gas Recirc Valve
52	Leaking Injector
52	Spill Valve Signal (Diesel)
61	shift solenoid N1 system open circuit
62	shift solenoid N1 system short circuit
63	shift solenoid N2 system open circuit
64	shift solenoid N2 system short circuit
65	lock up solenoid circuit open
66	lock up solenoid circuit short
72	shift switch system multifunction
75	Vehicle Speed Sensor
76	Input shaft speed sensor